


Sensore resistivo sinistro 0-90Ohm Cod. AEB1000
Left resistive sensor 0-90Ohm Code AEB1000**Manuale Istruzioni di Montaggio / Assembly instructions**

- 1) Posizionare il sensore sulla multivalvola e fissarlo con le apposite viti.
- 2) Inserire il connettore nel sensore ed eseguire i collegamenti come da schema di montaggio del commutatore/indicatore.

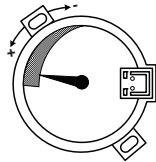

È possibile effettuare una piccola rettifica del numero di chilometri che possono essere percorsi in riserva; ruotando il sensore nella sede della multivalvola in senso antiorario, i chilometri che si possono percorrere in riserva aumentano mentre ruotandolo in senso orario i chilometri che si possono percorrere diminuiscono.

Il certificato di garanzia del prodotto è disponibile sul sito internet AEB (www.aeb.it) nella sezione prodotti/sensori e indicatori/AEB1000.

- 1) Place the sensor on the multivalve and fix it with the relevant screws.
- 2) Insert the connector into the sensor and wire as indicated in the assembly diagram of the switch/indicator.

It is possible to carry out a small change of the kilometre number that can be driven as reserve; by rotating the sensor in the seat of the multivalve in counterclockwise direction, the kilometres that you must drive as reserve ncrease, while rotating it in clockwise direction, are reduced.

The warranty certificate is available on the website AEB (www.aeb.it) in the products section/sensors and indicators/AEB1000.

